




## CONICURL CURLING WAND 25-13mm OPERATING INSTRUCTIONS



Follow us on Facebook  
and win free products.

30-32 Garner Place  
Ingleburn 2565 NSW  
[www.be-bella.com.au](http://www.be-bella.com.au)  
Designed in Australia  
Made in China  
Professional Products Division



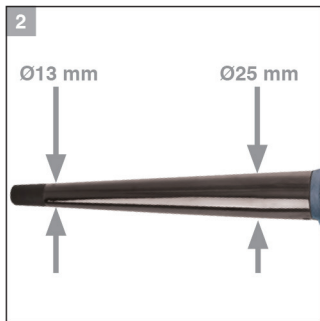

- As additional safety measure, it is recommended that a tested residual current appliance (RCD) with a residual operating current of not more than 30 mA be installed in the bathroom circuit. Ask your electrician for advice.
- Disconnect from the mains before cleaning or servicing the appliance.
- Never use the appliance if it is defective, if it has fallen onto the floor or if the mains cable is damaged. A damaged mains cable may only be replaced with an original replacement cable by an authorised Service Center or another similarly qualified person, in order to avoid hazards.
- Repairs may only be performed at an authorised Service Center using original parts. Only specialists properly trained in the handling of electrotechnical appliances may repair electrical equipment.
- Only use accessories recommended by the manufacturer.
- When disconnecting the appliance from the mains, never pull on the mains cable or on the appliance itself.
- Do not hold the appliance by the mains cable to carry it and do not use the cable as a handle.
- Do not wind the mains cable around the appliance.
- Keep the mains cable and appliance away from hot surfaces.
- Make sure that the mains cable is not twisted or kinked when used and stored.
- Never use the appliance where aerosol (spray) products are being used or where oxygen is released.
- Do not expose the appliance to temperatures below 0°C and above +40°C for any length of time. Avoid direct exposure to sunlight.
- We are not liable for damage caused as a result of improper use or failure to observe these operating instructions.

## **Cleaning and Care**

- Before cleaning the appliance, disconnect from the mains power outlet and allow it to cool down.
- Do not immerse the appliance in water.
- Only wipe the appliance with a soft cloth, which may be dampened slightly. Do not use solvents or abrasives!



## **Disposal in EU Countries**

Do not dispose of the appliance with domestic refuse. As part of the EU Directive governing the disposal of electrical and electronic equipment, the appliance is accepted free of charge by local waste collection points or recycling centres. Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment. At the end of its service life, please dispose of the appliance in accordance with statutory requirements.

## Operation

- Unfold the base stand and place the appliance on a flat, smooth, non-heat-sensitive surface.
- Connect to the mains power supply.
- Using the on/off switch (E), switch on the appliance (Fig. 1).
- Set the desired temperature (80°C – 210°C). The preset temperature is 180°C. To increase the temperature, press the ► button (F). To reduce the temperature, press the ◀ button (G).

**Note:** The temperature can be adjusted by 5°C at a time by tapping on either of these buttons. To adjust the temperature more quickly, hold down the appropriate button.

- The LCD display flashes three times when the temperature is set. Once the set operating temperature has been reached, the LCD display shows the temperature. The LCD display flashes until the desired temperature has been reached. After the desired temperature has been reached, the flashing stops.
- After use, switch off the appliance with the on/off switch (Fig. 1). Hold the on/off switch to do this. The LCD display must go out.
- Disconnect from the mains power supply.
- Allow the appliance to cool down.

## Tips For Successful Styling

**Important:** The appliance comes with a protective glove – this must be worn (Fig. 3) on the hand used to wrap the hair around the heating element in order to protect the fingers. However, the glove does not protect the fingers if they are exposed to prolonged contact with the heating element.

- Always test the curling tongs on a small section of hair first.
- Divide your hair into sections about 2cm thick and 4cm wide.
- Hold the curling tongs vertically. Wind the section around the conic curling tongs from the base to the tip to create a spiral. (Fig. 3)
- When the entire section has been wound around the curling tongs, hold it for a few seconds before carefully removing the curling tongs from the tight curl. Do not brush or comb hair while it is warm.
- After curling the desired sections of hair in this way, the curls can be loosened with the fingers and the hair can be styled.

**Tip:** To make it easier to curl hair around the neck area, hold the curling tongs horizontally instead of vertically.

- To create large curls, wind the section of hair around the base (25 mm) of the curling tongs (Fig. 2) and use the tip (13 mm) of the curling tongs for smaller curls (Fig. 2).